



**Every glass securely held in place. For better glass protection**

The GlassCare system helps protect delicate glassware. It uses SoftSpikes to safely hold glasses in place, and has a unique bottom rack that securely holds stem glasses, protecting them from excessive vibration that can lead to breaking.

---

The GlassCare System in the advanced AEG dishwasher offers specialist care for glassware throughout the cleaning process. The unique SoftGrip feature ensures that the stem and foot of every glass are held gently but firmly in exactly the right position throughout the duration of the programme.

**Product Benefits & Features**

**The GlassCare system helps protect glasses from breaking**



The GlassCare system protects fragile glassware. It uses SoftSpikes in its upper rack to securely hold glasses, and has a unique bottom rack that safely holds stem glasses, protecting them from excessive vibration that can lead to breaking.

**Customisable space and convenient cleaning with MaxiFlex**

The MaxiFlex drawer is engineered to accommodate cutlery and utensils of many sizes, whether large or awkwardly shaped. Flexible dividers and maximised depth mean each load is customisable. Essentially every item is seamlessly loaded and cleaned in one go.

**Powerful dishwashing. With SatelliteClean®**



Experience impeccable dishwashing with SatelliteClean®. This spray arm has three-times better coverage than the standard. Because the double rotating arm constantly changes the angle of the spray. Water reaches every corner. For a complete clean.

**Effortless cycle-setting with QuickSelect**

QuickSelect offers optimal control over the dishwasher. Choose the cycle time with the slider and add extra treatments with a tap. Then the machine will do the rest. Get tailored cleaning delivered at a time that suits. And spotless dishes.

**Open-door drying with AirDry**

AirDry technology delivers up to three times better drying performance when compared to closed-door systems. The door automatically opens at the end of the drying phase and air is circulated inside the machine. Dishes emerge perfectly dry. Every time.

**Product Specification**

