



The adaptable surface for every pan

With MaxiSense® zones pots and pans have maximum space and choice of position, as long as the cross is covered

With MaxiSense® zones pots and pans have maximum space and choice of position, as long as the cross is covered

Product Benefits & Features

Perfect control

'Direktouch' controls use the very latest digital technology to ensure precise heat selection.



The cooler surface for a safer kitchen

Our intelligent induction technology heats pans and the food in them, but nothing else. The surface round the pans stays cool. So if you accidentally touch the hob near the pans while you're cooking, your fingers are safe.



Intense rapid heat

No more waiting around for pots to boil. The PowerBoost button gives you an instant burst of heat that boils water in under 90 seconds* – that's even faster than an electric kettle. It's perfect for tasks like boiling potatoes, and other quick cooking jobs too, like searing meat.

Put your cooking on hold

If you get interrupted while you're cooking, touch the Pause button. It stops all the heat when you're called away from the hob, so nothing burns. Pause remembers the heat levels you were using, and with another touch you're back on course.

Product Specification

